

All My How-To's I have Written On Paper that I will do a Digital File

1

- TylerTristar2IsBack's Steps to Making Homemade VHS Tapes
 1. Find Out What Video Output your computer has.
 2. Go To Radio Shack (Or Aaron's Electronics or other popular stores that sell computers) and find a filter that filters HDMI, RCA. (Can be anything.)
 3. Put RCA Yellow- (Video), White- (Left Audio), and Red- (Right Audio) in the input.
 4. Put a blank VHS in the machine.
 5. Get the VCR ready.
 6. Hit Record on the VCR. After it records, Hit play on your VCR.
 7. After it is done, rewind the tape to see if it actually encoded to the filmstrip.
 8. Do it on TV. To notice yourself, check the tape because you want to show proof that the tape is actually recorded.If those steps don't teach you well, go to this link: <https://www.wikihow.com/Create-a-VHS-Tape-from-a-Video-File>
- How to Create a VHS Tape from a Video File (NOT MY HOW-TO)
 1. Determine whether or not your graphics card can support s-video or composite video output.
 2. If it does, plug your VCR input into the video card output.
 3. Plug your sound card into the audio input on your VCR.
 4. Set your computer to use the video out.
 5. Open your media player in full screen mode on the video out.
 6. Press the record button on your VCR.
 7. Play the video on your computer.
 8. When the video finishes, press stop on the VCR.*This method is not very high quality. For best results, take your file to a professional.
Use your television to monitor your VCR to make sure things are working.
**It is legal to use this method to copy movies that you purchased from the store, but it is ILLEGAL to distribute these movies
 - Things You'll Need: VCR, Blank tape, Computer with graphics card, Audio and video cables, and Television (optional)
- Steps to Record TV Programs onto VHS
 1. All you need is a cable TV receiver (If not, Dish Network or DIRECTV Receiver.) (If Neither one, DTV Converter box.), Blank VHS Tapes, a TV-Recorded Program on your DVR, the DVR's original remote, and a VCR/TV Combo. (Either has modes: SP/LP/SLP Modes or no modes other than SP/SLP Modes)
 2. Turn the TV on. Then hook up the receiver and turn the DVR on.
 3. Turn the channel on your receiver or go to recordings on your DVR.
 4. Select the DVR Recording. Then, Do NOT Start the recording until you pop in a blank VHS Tape.
 5. Pop in the blank VHS Tape, then Hit Stop when Play appears. (NOTICE: WHEN IT IS A COMPLETELY BLANK TAPE WITH THE TAB INTACT, THE TAPE STOPS IN THE VCR WHEN YOU POP IN THE TAPE.)
 6. Hit PLAY on your TV recording. Then FAST FORWARD the DVR Recording if it has promos, Idents, and/or commercials) (NOTICE 2: YOU CAN PAUSE-RECORD THE BEGINNING OF THE DVR RECORDING BEFORE, DURING, AND AFTER RECORDING ON YOUR BLANK TAPE.) Then, Hit RECORD on the blank VHS Tape.
 7. After you get done recording a program onto VHS, Hit STOP on your tape. Then, Play the tape. (Sometimes, it rewinds when the tape ends.)
 8. Check the filmstrip to see if there are any damages.
 9. If the tape is damaged, show the damage of the tape on YouTube.
- (NO RADIO/TV/VCR COMBO NEEDED) How to Record Radio to VHS (2021 Version from the Original Paper Version)
 1. Materials needed are: RCA Cables, Blank VHS Tape, Boombox or Walkman or Discman or MP3 Player, AUX CORD, TV/VCR Combo, Microphone, and Karaoke Machine With RCA Jacks.
 2. Your Karaoke Machine has 3 RCA Jacks. (If you don't have a karaoke machine that you can hook up to your TV, get one yourself. Then, plug it up after that)
 3. Turn on your TV after plugging it in.
 4. Pop in a blank VHS Tape.
 5. Plug up your boombox/Walkman/Discman/MP3 Player. Then, Use the AUX Cord and plug it in the Headphone Jack on your radio.
 6. Turn the radio to your favorite Station by using either AM or FM Radio. (NOTE: YOU CAN USE AN AM/FM DX RADIO, A WEATHER RADIO, AN 8-TRACK TAPE PLAYER WITH REGULAR, SKINNY HEADPHONE JACKS, or a Record Player with Regular, Skinny Headphone Jacks.)
 7. Hit Record on your Blank VHS Tape.
 8. If You want to do a voiceover, put it on VHS.
 9. If you have a "3-Mode VCR", do the same thing like you do with normal VCR's.
 10. When the tape ends, put a common VHS Screen of Death/ Moaning Sound. Then Stop the Tape.
 11. If you want to record a few radio ads onto VHS, that's fine. Pause-Record the Tape.
- How To Make Homemade Cassette Tapes (2018-Present) (2021 Digitalization)
 1. Materials are an Aux Cord, Jensen Cassette Recorder, SONY CFD-S50 OR NEWER, Phone, Tablet, Computer, or Chromebook; Used Blanks or Sealed Blanks, and Sony Walkman w/ rewind button or other Walkman tape-playing Devices.
 2. Plug up your Sony CFD-S50 or Newer.
 3. Hook up your aux cord to your Sony CFD-S50 or newer recorder to your device.
 4. Get a blank cassette tape or more at either eBay, Amazon, Walmart, Staples, or thrift stores and buy them.
 5. Wait for shipping to come.
 6. Open your package of Cassette tapes that you ordered. (If it is a massive haul or a small haul.)
 7. Open your blank, put your blank inside the recorder, and then record.
 8. Get music off of YouTube or record music off from other sites.
 9. After the cassette ends, you can put a sound effect from VHS Tapes. The Sound Effects are (Disney VHS Tapes): Phone Dial Sound (CTHV/Paramount/WB, Etc.): WSOD and BSOD (Black Screen of Death), RSOD (Red Screen of Death)- UK VHS Tapes. Then, a moaning sound from VHS Tapes.
 10. If the tape ends, go to Side 2 and record. Then play your cassette on both Sides.Tips:
 - * You can record music from radio stations to your tape.
 - ** You can make legal copies of your mixtapes and sell them for money, but it is ILLEGAL to make bootleg copies of copyrighted albums.
 - *** YOU CANNOT RECORD TV SHOWS, MOVIES, OR ANYTHING THAT IS MACROVISION COPYRIGHTED MATERIAL ONTO YOUR CASSETTE TAPE. YOU WILL GET PRISONIZED FOR 5 YEARS.
- LAST HOW-TO: HOW TO DO VIDEO CAPTURES FROM YOUR VHS TAPES/DVDs on your Computer
 1. Install an app that does video capture (Computer)
 2. All you need is a computer box, video capture card, RCA Cables, A VCR, A DVD Player, and used VHS Tapes and DVDs.
 3. Hook up your video capture card to your computer.
 4. Plug up your VCR or DVD Player. Then Hook it up to the box. Follow the RCA Cable input rules.
 5. Accept any uses on the app. (Questions, notice, Policy, etc)
 6. Turn on your VCR.
 7. You must have a DVD or a VHS tape with you.
 8. Pop in a VHS Tape or DVD.
 9. Stop the tape or DVD.
 10. Video Capturize the VHS tape or DVD. Then hit Record on the Capture and play the DVD or VHS.
 11. After you get done with the VHS or DVD Capture, Save the movie as... and then put the title of the VHS or DVD.
 12. Upload it to Mega.nz, Archive.org, or Photos.google.com. Also, Make sure the capture has NO FREEZING IMAGES. Do NOT Upload the rip to YouTube because you can either get your video blocked or get a Copyright Strike.
- HOW TO RECORD FROM KINDLE FIRE STICK/Other Streaming Devices/ Other Media TO **VHS**
 - Materials: Blank VHS Tape, VCR, HDMI to AV Converter, RCA Cables, Kindle Fire Stick, TV, Extension Cord, USB Cables, RF Modulator, Portable Chargers, (2) RF Cables, and (3) Different Remotes
 1. You might want to plug up your TV.
 2. You might want to use your extension cord and plug it up.
 3. Hook the VCR up to the TV by using your RF Cable. Then plug up your VCR.
 4. Use your Second RF Cable for your VCR to hook your RF Modulator through the RF Output on your VCR. You might want to plug up your RF to RCA Converter first.
 5. You Might want to use and hook up your USB Cable to your portable wall charger to plug up your HDMI to RCA Converter. Then, Hook up your HDMI to RCA Converter to the RF Modulator.
 6. Hook up your Kindle Fire Stick, Chromecast, or your Roku as to your Input for your HDMI to RCA Converter. Then plug your Kindle Fire Stick, Chromecast, or Roku.
 7. Turn the TV Channel to AV (If RCA Cable Compatible) (If you have an RF Cable, turn the TV Channel to TV.) Then press 3-0 on your TV Remote #1. Then Plug Up your VCR.(Older VCR's) Hit Channel 3 on your VCR. (Newer VCR's) Hit the channel button to either Line 1 or Line 2 on your VCR
 8. Turn on your VCR. Then pop in a blank VHS Tape.
 9. If you have a recording tab on your tape and that the blank is used, pull the recording tab off. Then put Scotch tape on the recording tab's place.
 10. You might want to record an FBI Warning Screen and a logo for your VHS Tape and either NO previews or with Previews. Then hit the pause-record on your tape.
 11. Go to your apps. (You can use YouTube, Hulu, Netflix, Disney +, etc.) Then Hit Select.
 12. Once the app opens, search or scan through your YouTube Videos. Also, you can look for TV Shows and movies on Hulu, Netflix, Disney +, etc. You can use your Kindle Fire Stick remote (Remote #2).

13. Record your program. You can use your Remote #3.
14. You might want to record a WSOD or BSOD or any VHS Screen of death. Then either a VHS Moaning sound or a double Moaning Sound VHS.
15. Once the program reaches the end of the tape, the VCR will rewind the tape automatically. Then it will eject.
16. After your recording is ejected, make sure you break off the recording tab or remove the homemade recording tab that you made yourself.
17. You might want to check the film strip for any damage on your tape.
- Other Ideas on How to Record from Kindle Fire Stick Streaming Device, or other Media to **VHS**
 - Materials: Blank VHS Tape, VCR, HDMI to AV Converter, RCA Cables (One Spare, One For the VCR to the TV), Kindle Fire Stick, TV, Extension Cord, USB Cables, Portable Chargers, (3) Different Remotes, RXII Digital Video Stabilizer (To Stop Macrovision blurs on your VHS Recording Pleasure), and Macrovision Copy-Protected VHS Tapes/DVDs.
1. You might want to plug up your TV.
2. You might want to use your extension cord and plug it up.
3. Hook the VCR up to the TV by using your RCA Cable. Then Plug up your VCR.
4. Use your Second RCA Cable for your VCR to hook your HDMI to AV Converter to the front or the back of your VCR.
5. You Might want to use and hook up your USB Cable to your portable wall charger. Then You might want to plug up your HDMI to AV Converter.
6. Hook up your Kindle Fire Stick, Chromecast, or your Roku as to your Input for your HDMI to RCA Converter. Then plug your Kindle Fire Stick, Chromecast, or Roku.
7. Turn the TV Channel to AV (If RCA Cable Compatible) (If you have an RF Cable, turn the TV Channel to TV.) Then press 3-0 on your TV Remote. Then Plug Up your VCR. (Older VCRs) Hit Channel 3 on your VCR. (Newer VCRs) Hit the channel button to either Line 1 or Line 2 on your VCR.
8. Turn on your VCR (For Recording). Then pop in a blank VHS Tape. If you want to use a spare VCR (For Playing VHS Tapes that have Macrovision), you must use a spare RCA Cable, a 9V Battery, and an RXII Digital Video Stabilizer. Then Plug up your Spare VCR. (For Playing your tapes)
9. If you have a copy-protected VHS Tape, use the RXII Digital Video Stabilizer to get rid of Macrovision blurs any black-and-white picture or other distortions. But first, put in a 9V battery inside your Digital Video Stabilizer by opening it before battery installation and closing it back after battery installation.
10. Hook up your VCR (Video Output) that you want to play tapes onto the input of your RXII Digital Video Stabilizer. Then get a spare VCR that you can record VHS Tapes on (VCR Input) and hook it up to the output of your RXII Digital Video Stabilizer.
11. If you have a recording tab on your tape and that the blank is used, pull the recording tab off. Then put Scotch tape on the recording tab's place.
12. You might want to get a copy-protected VHS Tape or a VHS without Macrovision first. Then, You might want to record an FBI Warning Screen and a logo for your VHS Tape and either NO previews or with Previews. Then hit the pause-record on your tape. (either from VHS or YouTube)
13. Go to your apps. (You can use YouTube, Hulu, Netflix, Disney +, etc.) Then Hit Select.
14. Once the app opens, search or scan through your YouTube Videos. Also, you can look for TV Shows and movies on Hulu, Netflix, Disney +, etc. You can use your Kindle Fire Stick remote (Remote #2).
15. Record your program. You can use your Remote #3.
16. You might want to record a WSOD or BSOD or any VHS Screen of death. Then either a VHS Moaning sound or a double Moaning Sound VHS.
17. Once the program reaches the end of the tape, the VCR will rewind the tape automatically. Then it will eject.
18. After your recording is ejected, make sure you break off the recording tab or remove the homemade recording tab that you made yourself.
19. You might want to check the film strip for any damage on your tape.

WARNINGS:

IT IS LEGAL TO MAKE ONLY ONE COPY OF YOUR OWN FAVORITE MOVIES/TV SHOWS FROM STREAMING DEVICES, VIDEOTAPES, OR VIDEO DISCS You Buy at the store, but IT IS ILLEGAL TO DISTRIBUTE THOSE MOVIES/TV SHOWS.

Modes

SP	LP	EP/SLP
2 hours (T-120)	4 hours (T-120)	6 hours (T-120)
2hr 40 min (T-160)	5hr 20 min (T-160)	8 hours (T-160)
3hr 20 min (T-200)	6hr 40 min (T-200)	10 hours (T-200)
2h 04 Mins (T-120)	4h 07 Mins (T-120)	6h 11 Mins (T-120)
2hr 44 Mins (T-160)	5hr 27 Mins (T-160)	8hr 11 Mins (T-160)
3hr 25 Mins (T-200)	6hr 50 Mins (T-200)	10hr 15 Mins (T-200)

Another thing I forgot to include in this tutorial: You can use the RXII Digital Video Stabilizer to hook a VCR to another VCR. First, Hook Up your First VCR(record) onto the TV. Next, hook up the input of the VCR onto the output of the Stabilizer. Then, hook up the input of the stabilizer to the output of the VCR. Last, Hook up the recording VCR onto the playing VCR. After you do these hookups, you can copy macrovision Copy Protected VHS Tapes and DVDs (As well as Copy Protected TV Channels.)

- How To Make A Homemade VHS Tape Using a Set Top Box and a USB Flash Drive
 - Materials: Blank VHS Tape, Set Top Box, Set Top Box Remote, Computer, USB Flash Drive, VCR, VCR Remote, TV, TV Remote, RCA Cables, and extension cord.
- 1. Open Up Google Chrome on your Computer
- 2. Go to a YouTube Channel and select the video You want to download or go to other video sites such as Dailymotion, VidLii, Viare.tv, Internet Archive, Mega.nz, etc. and then select the video you want to download.
- 3. Open up sites such as Google Drive, Flvto.biz, Loader.to, or anything that will let you download the video. If it is Google Drive, Hit Download anyway on the video you want to download.
- 4. If you want to make a compilation VHS Tape, Use Windows Movie Maker 2012. WINDOWS MOVIE MAKER 2012 IS THE BEST OPTION!!!!
- 5. If you want to cut out a part of your compilation, cut the part out using the trim button on your Windows Movie Maker 2012 App on your movie you're making.
- 6. Hit Save as on your movie, Close out on your movie, open the movie back, and then save the movie onto your computer.
- 7. Wait Patiently on your movie to get done.
- 8. Open the movie on Windows Media Player.
- 9. Stick the USB Flash Drive onto your Computer. Then, drag and copy the file on a USB Flash Drive.
- 10. Close the apps on your computer.
- 11. Remove the USB off the computer.
- 12. Plug Up your TV.
- 13. Plug Up your Extension Cords
- 14. Plug up your VCR and your set top box.
- 15. Hook up your VCR to the TV. Then, Hook up your Set top box to your VCR.
- 16. Turn on your TV, your VCR, and your Set top box.
- 17. Hit the VCR Channel buttons to AV. If not, The AV Connections automatically show up on your VCR.
- 18. Hook up your USB Flash Drive to the set top box.
- 19. Press TV/USB on your set Top Box Remote.
- 20. Select "Movie" on the Set Top Box Remote.
- 21. Make Sure the files are ready. Then wait for the file to come up.
- 22. Get a blank VHS Tape.
- 23. Put in the blank VHS Tape in the VCR and Pause Record the tape on your VCR.
- 24. Select "Movie" on the Set Top Box Remote again.
- 25. Hit OK on the files.
- 26. Hit the pause button on your tape while the tape is recording.
- 27. When the tape reaches the end, put a VHS Screen of Death or other closing, stop the tape. Then, rewind the tape.
- 28. Turn off the Set top box.
- 29. Eject the tape and break off the recording tab.
- 30. Test out your tape.

Warnings: It is Legal to keep your Homemade VHS that You Made or to watch the tape with your friends, but is ILLEGAL to distribute those movies or TV Shows.

- HOW TO RECORD DIGITAL TV to VHS
 1. Use the Antenna Cable and plug it in the Antenna Input of the Set Top Box.
 2. Hook up the Set Top box to the RCA Cables (RCA Output) of the Set Top Box.
 3. Hook up the Set Top Box Cables onto the VCR (RCA Input)
 4. Hook the Cables onto the VCR (AV Out). Then, Hook it to the AV Input to the TV
 5. Test the VCR
 6. Switch the VCR Channel to AV.
 7. Straighten the TV Antennas so you can get a signal from the Set Top Box.
 8. Pop in a Blank VHS Tape.
 9. Record the Blank VHS Tape.
 10. Stop the Tape. then play the Blank VHS Tape.
- How to get Non-Satellite TV on any of your TVs (Not my Tutorial)
 1. Turn on/ reboot your PC.
 2. Grab your old video camera (AKA VHS Camcorder).
 3. Grab video and audio cables from the bin.
 4. Connect the video cable from your VHS Camcorder.
 5. Connect the audio cable from your PC.
 6. Go On eBay, thrift stores, flea markets, yard sales, garage sales, estate sales, and bargain bins to buy blank VHS Tapes or pre-recorded ones.
 7. Open/ Unseal the blank VHS Tape.
 8. Pop it in your old VCR/TV Combo
 9. Use the tripod or a table to focus on the PC Screen.
 10. Push the record button.
 11. Now, you can videotape new things on your new VHS Tape.